


## INSTALLATION INSTRUCTIONS 40/45HR Forks To Floor Adjustment


- 1) Refer to service manual for proper blocking information.
- 2) Extend the pantograph mechanism.
- 3) Raise the pantograph mechanism approximately 5 feet from the floor.
- 4) Block the pantograph mechanism from retracting.
- 5) Block the pantograph mechanism frame to prevent it from lowering.
- 6) Remove all hydraulic pressure from the lift and auxiliary systems.
- 7) Locate and disconnect hose ends.
- 8) Locate wire harness.

Hose Ends

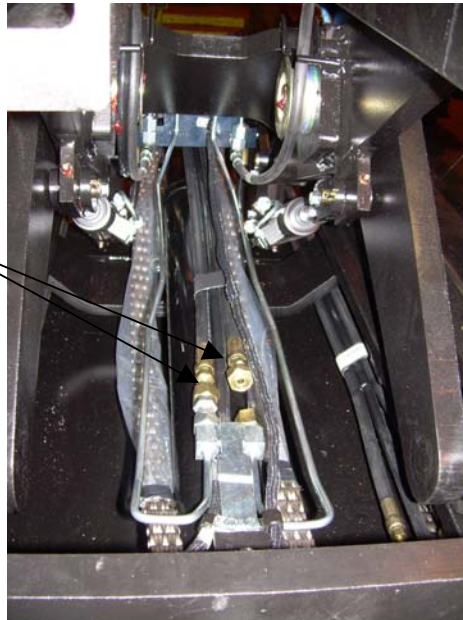

- 9) Install extenders from kit.

Extender (260773)  
Torque to  
30 ft-lbs/41 N-m

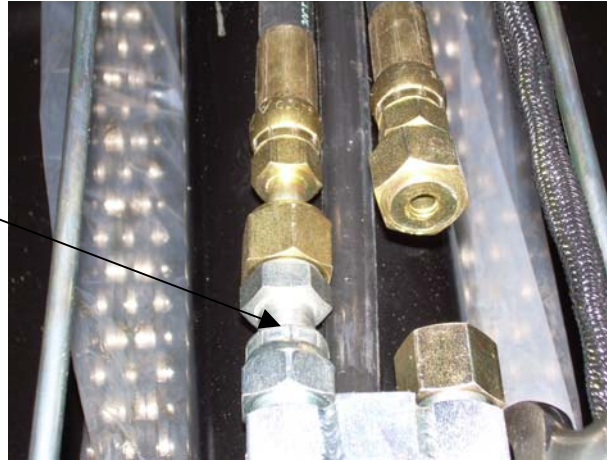

- 10) Pull at least 3" of harness out of tube.

- 11) Wrap at least 3" of harness with electrical tape or heat shrink for protection and insert 1" of tape into tube.



12) Adjust chain anchors 1 ½ "equally to lengthen chain .



13) Remove the blocking and lower the mast.

14) Check the chain anchor adjustment so the chain anchor is equal and the forks are ¼" above the floor.

15) Verify that the harness is free to move and is not pulled tight.

16) Check for hydraulic leaks.